

Z40

MAINTENANCE INSTRUCTIONS

zummo

Maintenance tips and cleaning

zummo

Z40 ADAPT

- We recommend the use of protective gloves when handling our juicers.
- Cleaning the squeezing system and front protector is recommended at least once a day.
- Do not forget to check the bark deposits promptly.
- All parts are dishwasher safe (except the front protection).



We recommend not cleaning the front covers in the dishwasher, in order to prevent scratches or damage.

Recommended washing frequency

zummo

Clean at least once a day the following components:

Squeezing area:

- Squeezed tray
- Blade
- Cups
- Filter tray and shaft
- Buckets
- Front protection
- Stainless steel front of the machine

Clean weekly or twice a week in necessary periods:

Feeder:

- Machine roof.
- Feed ramp.

Products to use

The machines must be cleaned and disinfected with the aforementioned periodicity. In this process, first of all, all solid residue will be removed and then it will be cleaned and disinfected. The following types of products can be used to disinfect machines:


Food-grade descaling/disinfectant detergents: used either by immersion (small parts) or by spraying (large parts and stainless steel front of the machine) in the concentration recommended by the manufacturer. It must be allowed to act for the time indicated on each product and then a good rinse must be carried out in order to avoid contact of the juice with the product. These products usually have a very high PH that, over time, can degrade the PC, so it is recommended not to exceed the product's action times on transparent plastic parts.

Food grade chlorinated disinfectant detergents: same use as the previous ones. They can be used by immersion or spraying, taking into account the manufacturer's time recommendations. Thoroughly rinse the treated parts before they come into contact with the juice again.

Another option may be solutions with household bleach (4% chlorine) or industrial use (10% chlorine). The concentration needed to be effective at room temperature is 100 ppm, which means 2.5 ml of household bleach per liter of water or 1 ml of industrial bleach per liter of water.

C/ Cádiz, 4 - 46113 Moncada - Valencia (Spain) - (+34) 961 301 246 - zummo@zummo.es - www.zummocorp.com

Montaje

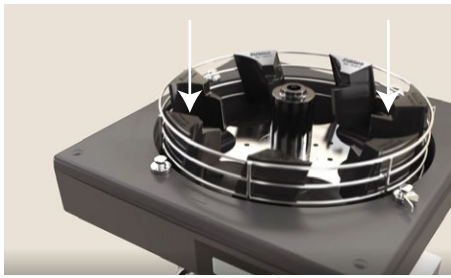


1. Place the inner basket



2. Place the lower separator




3. Place the top spacer.

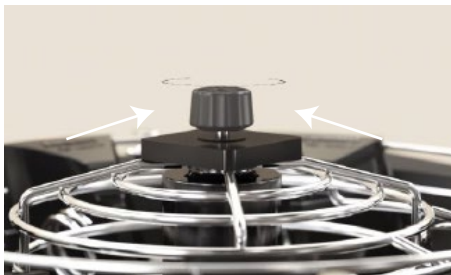

4. Screw on the nut.



5. Insert the basket.

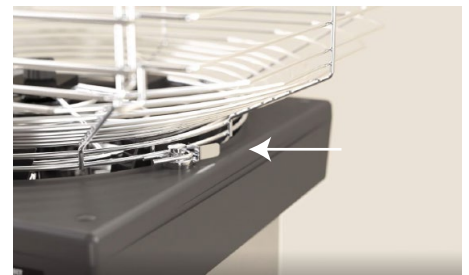

6. Activate the tab blocking.




7. Screw the balls.




8. Fit the juice extraction system together with the cups




9. Screw the nuts.

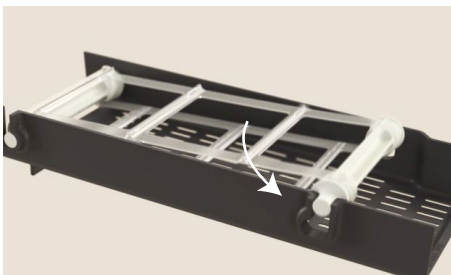

10. Fit the sweeper and insert it into the Adapt tray.

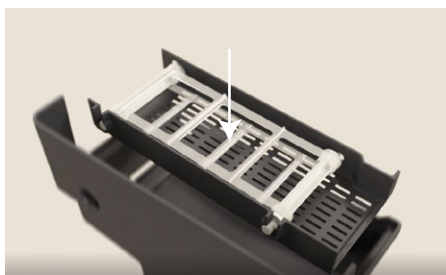

11. Insert the filter into the Adapt tray.

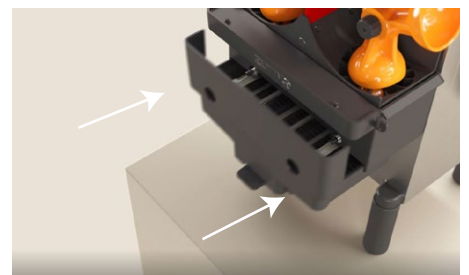

12. Insert the Adapt tray.

Montaje



13. Screw the nuts of the Adapt tray.



14. Turn the lower flange and fit one side of the front cover.




15. Remove the blade protector.




16. Insert the front cover.



17. Turn the lower flange and fit the other side of the front cover.

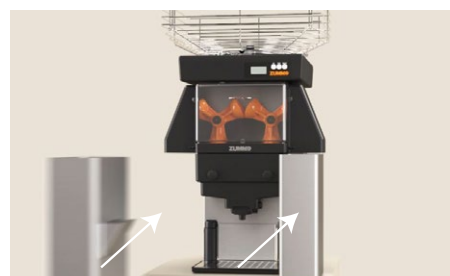

18. Fit the chutes.

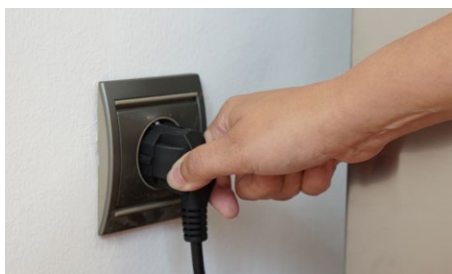

19. Plug the machine into the mains.



20. Press the on button.

Cleaning




1. Clean all parts with water and liquid detergent.



2. Also suitable for dishwashers (Except front cover).

Desmontaje

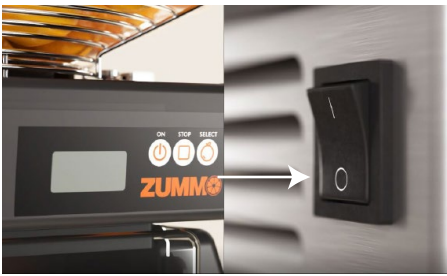

1. With the machine stopped press the off button.



2. Unplug the machine from the mains.



3. Turn the flange upwards and remove the side of the front cover.



4. Extract the front cover.




5. Now remove the other side of the front cover, turning the flange.




6. Do not forget to fit the blade protector.




7. Unscrew the nuts.

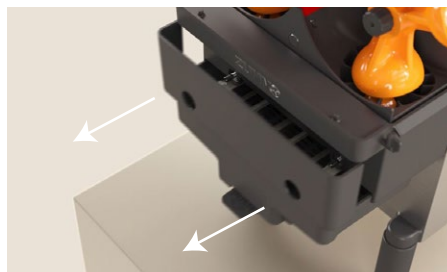

8. Extract the Adapt tray.

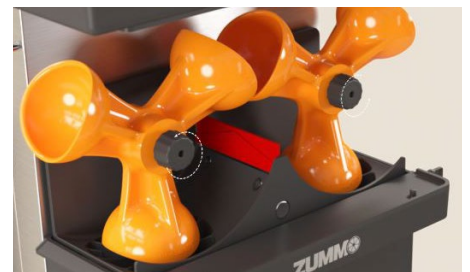


9. Unscrew the cups.

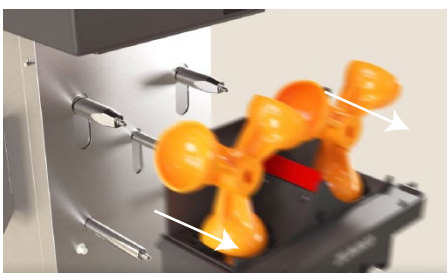

10. To remove the juice extraction system, pull it outwards.




11. Extract the Simpleclick balls.

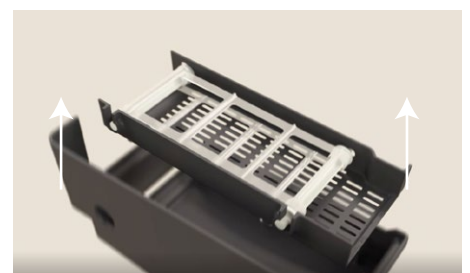


12. Separate the filter from the tray.


Desmontaje

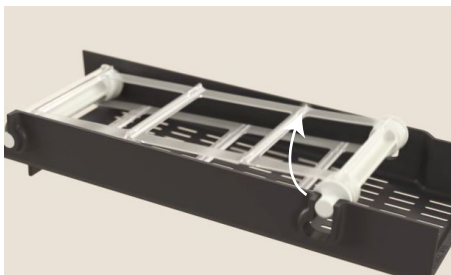

13. Remove the scraper from the tray.

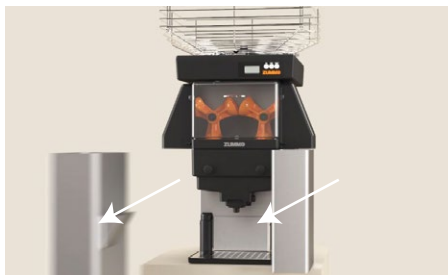

14. Separate the two chutes.

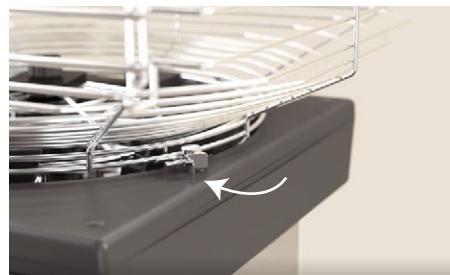

15. Turn the locking flange



16. Take out the basket by turning counterclockwise.




17. Unscrew the nuts and remove the spacer.



18. Pull out the spacer superior.




19. Pull out the bottom spacer.

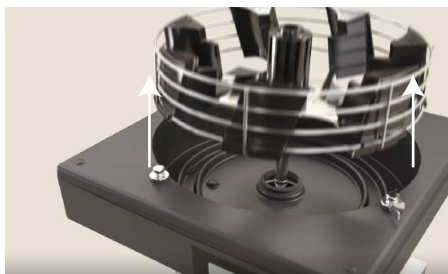


20. Pull out the lower basket.




Instructions for removing the Adapt tray.

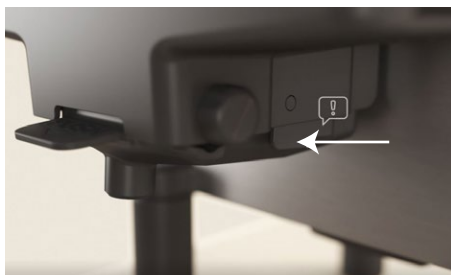

1. Press the tabs sides.

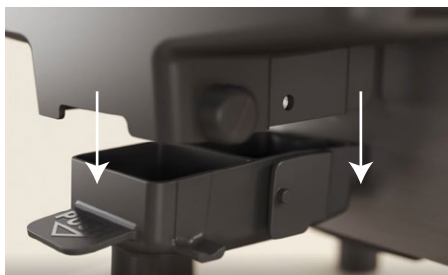

2. Pull the faucet out of the tray.

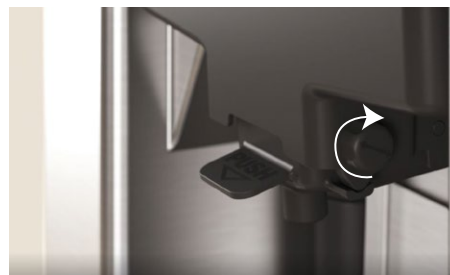

3. By turning the wheel, you can change the mode of the faucet.

zummo

P.O. Box 23 | C/Cádiz, 4, 46113 Moncada. Valencia. Spain. zummo@zummo.es | www.zummocorp.com | (+34)961 301 246